



Ausgabe Issue		Bild Nr. Picture No		VARIOLUX 2000 LEISE	VARIOLUX 2000 LEISE	Seite Page		
1999-1		B015				74		
Pos. Fig.	Anzahl/Quantity			Artikel Nr. Part No	Bezeichnung	Description	Satz Kit	Anmerkung Notes
	1214							
X	1	1		1715-1003-01	Schneidplatte.....	Cutting plate.....		
	2	2		9747-0631-02	Mutter	Lock nut.....		
X	3	4		1715-1045-01	Schraube	Screw.....		
X	4	1		1715-1002-01	Gehäuse-Schneidkammer....	Housing-cutting chamb.....		
X	5	1		1715-1031-01	El.Motor.....	El.motor		
X	6	1		1715-1052-01	Federring	Lock washer.....		
X	7	1		1715-1041-01	Schraube	Screw.....		
	8	2		9747-0631-02	Mutter	Lock nut.....		
X	9	2		1715-1042-01	Schraube	Screw.....		
X	10	1		1715-1004-01	Anlaufplatte	Spacer plate		
X	11	1		1715-1015-01	O-ring	O-ring.....		
X	12	1		1715-1006-01	Keilleiste	Wedge.....		
X	13	1		1715-1019-01	Achse.....	Wheel shaft		
X	14	2		1715-1000-01	Lauffelge.....	Wheel.....		
X	15	2		1715-1040-01	Starlock-Schnellbef.	Starlock.....		
X	16	2		1715-1001-01	Radkappe.....	Hub cap.....		
X	17	1		1715-1022-01	Schaltereinsatz	Switch		
X	18	1		1715-1021-01	Steckerkragen.....	Collar-connector		
X	19	1		1715-1035-01	Gehäuse-Oberteil	Housing-upper		
X	20	1		1715-1016-01	Konsole f.Fahrgestell	Console.....		
X	21	4		1715-1052-01	Federring	Lock washer.....		
X	22	4		1715-1046-01	Schraube	Screw.....		
X	24	1		1715-1017-01	Standbein-links.....	Leg-l.h.....		
X	25	1		1715-1038-01	Kondensator	Condensor		
X	26	2		9924-0616-16	Schraube	Screw.....		
X	27	1		1715-1009-01	Schneidwalze.....	Cutting roller		
X	28	1		1715-1005-01	Nachschneidplatte	Cutting plate.....		
X	29	1		1715-1034-01	Trichter.....	Hopper.....		
X	30	6		1715-1027-01	Einwegschrabe	One-way screw		
X	31	6		1715-1051-01	Scheibe.....	Washer.....		
X	32	1		1715-1026-01	Astführung	Branch guide		
X	33	6		1715-1024-01	Mutter.....	Nut.....		
X	34	2		1715-1049-01	Stanzmutter	Nut.....		
X	35	1		1715-1050-01	Scheibe.....	Washer.....		
	36	1		9747-0831-02	Mutter.....	Lock nut.....		
X	37	1		1715-1007-01	Stützplatte	Support plate		
X	38	2		1715-1028-01	Schraube	Screw.....		
X	39	8		1715-1023-01	Schraube	Screw.....		
X	40	2		1715-1049-01	Stanzmutter	Nut.....		
X	41	1		1715-1036-01	Gehäuse-Unterteil	Housing-lower		
X	42	1		1715-1018-01	Standbein-rechts	Leg-r.h.....		
X	43	2		1715-1020-01	Aufsteckkappe	End cap		
X	44	1		1715-1008-01	Welle	Shaft		
X	45	1		1715-1015-01	O-ring	O-ring.....		
X	46	1		1715-1004-01	Anlaufplatte	Spacer plate		
X	47	1		1715-1029-01	Lagerdeckel Kompl.....	Bearing plate assy.....		
X	48	4		1715-1025-01	Schraube	Screw.....		
X	49	4		1715-1044-01	Schraube	Screw.....		
X	50	1		1715-1037-01	Deckel.....	Side plate		
X	51	1		1715-1012-01	Stellknopf	Adjusting knob		
X	52	1		1715-1014-01	Stellschraube.....	Adjusting screw		